

HD403TS...



HD 403TS... AND HD 4V3TS... ACTIVE HOTWIRE AIR SPEED TRANSMITTERS

The **HD403TS**... series of hotwire air speed transmitters are used for measuring and controlling air speed in ventilation ducts, clean rooms, extractor fans, as well as monitoring air quality (IAQ), etc. These transmitters are equipped with a hotwire sensor, in the directional or omnidirectional version. The HD403TS... series of transmitters have a 4...20mA output, while the HD4V3TS... series have a 0...10Vdc output.


Two measuring ranges are available: 0.20...40m/s for ...\$1 and ...\$3 models with directional probe and 0.1...5.00m/s for ...\$2 and ...\$4 models with omnidirectional probe.

Technical specifications	Notes	
Air speed	0.15.00m/s	S2 andS4 models
Standard measuring range	0.2040.0m/s	S1 andS3 models
Measurement accuracy	±(0.2m/s+3%f.s.)	
Response time (integration) selected by jumper	0.2s 2.0s	Fast Slow
Operating temperature electronics probe	0+60°C 0+80°C	Slow
Compensation temperature	0+80°C	
Storage temperature	-10+80°C	
Electronics protection class	IP67	
Sensor working conditions	Clean air, RH<80%	
Case dimensions	58x65x35	Without probe
Standard cable length	2m	


Model	Output	Power supply	Load resistance
HD403TS	420mA	1240Vdc or 24Vac	$R_L < 500\Omega$
HD4V3TS	010Vdc	1640Vdc or 24Vac	$R_L > 10k\Omega$

Installation notes

- The probe must be used with clean air only and humidity below 80%.
- In ...S1 and ...S3 directional probes, the sensor hole must be oriented in the same direction as the flow: turn the probe so that the displayed speed will be the highest, at constant flow.
- To fix the probe of ...S1, ...S2 and ...S3 models inside a ventilation duct, a pipe ,etc. use a PG9 or PG11 metal cable gland according to the shape or a connection equipped with a ¼" rubber ring.

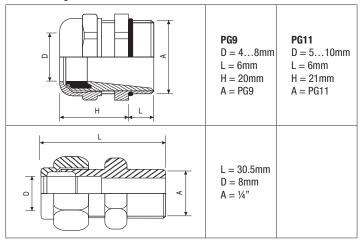


- The transmitters are factory calibrated and no further adjustments are required.
- Select the response time by using the JP jumper: in the FAST position, the response time is 0.2s, in the SLOW position is 2s. Set the jumper on SLOW in case of turbulence, otherwise please select the FAST position.

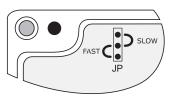


Electrical connections

Power supply and output


Power the instrument at the voltage shown in the electrical specifications: power supply terminals are marked as +Vcc and GND. The output signal comes from VEL and GND terminals. To make the connection, please use a three-wire cable as shown in the drawing below.

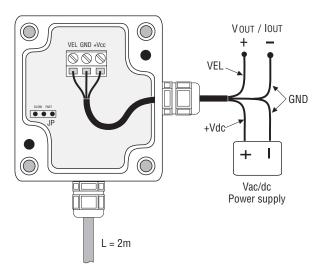


Probe dimensions

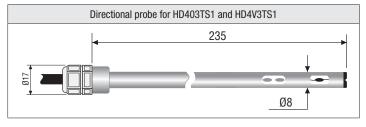




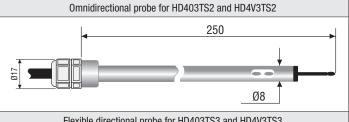

Flexible directional probe for HD403TS3 and HD4V3TS3

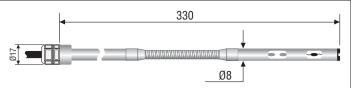

Omnidirectional probe for HD403TS4 and HD4V3TS4

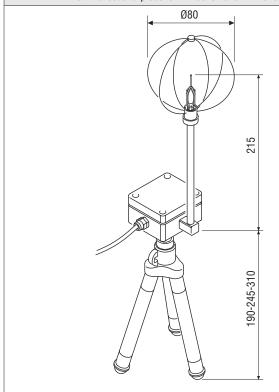



ORDERING CODES

HD403TS1: Active hotwire air speed transmitter with 4...20mA output. Measuring range: 0.20...40m/s. Directional probe \emptyset =8mm, cable L=2m.

HD4V3TS1: Active hotwire air speed transmitter with 0...10Vdc output. Measuring range: 0.20...40m/s. Directional probe Ø=8mm, cable L=2m.

HD403TS2: Active hotwire air speed transmitter with 4...20mA output. Measuring range: 0.1...5.00m/s. Omnidirectional probe Ø=8mm, cable L=2m.

HD4V3TS2: Active hotwire air speed transmitter with 0...10Vdc output. Measuring range: 0.1...5.00m/s. Omnidirectional probe Ø=8mm, cable L=2m.


HD403TS3: Active hotwire air speed transmitter with 4...20mA output. Measuring range: 0.20...40m/s. Flexible directional probe, Ø=8mm, cable L=2m.

HD4V3TS3: Active hotwire air speed transmitter with 0...10Vdc output. Measuring range: 0.20...40m/s. Flexible directional probe, \emptyset =8mm, cable L=2m.

HD403TS4: Active hotwire air speed transmitter with 4...20mA output. Measuring range: 0.1...5.00m/s. Omnidirectional probe with wired protective cover Ø=80mm. Equipped with tripod.

HD4V3TS4: Active hotwire air speed transmitter with 0...10Vdc output. Measuring range: 0.1...5.00m/s. Omnidirectional probe with wired protective cover Ø=80mm. Equipped

How to compose your purchasing code

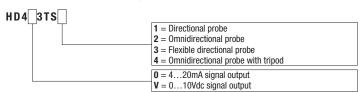



Dimensions

